



Relay


A **relay** is an **electrically** operated **switch**. It has a set of input **terminals** for one or more control **signals**, and a set of operating contact terminals. The switch may have any number of contacts in multiple **contact forms**, such as make contacts, break contacts, or combinations thereof.

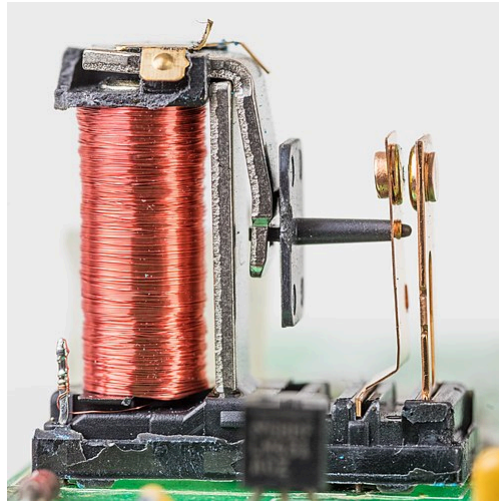


A relay

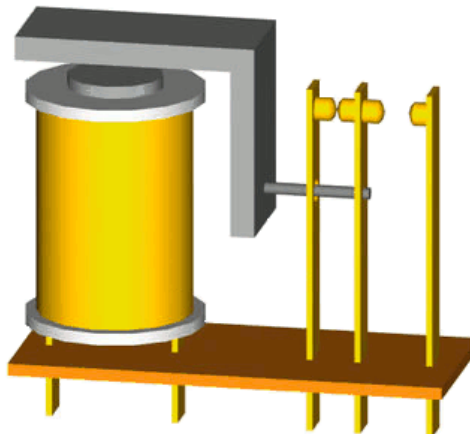

Electromechanical relay principle

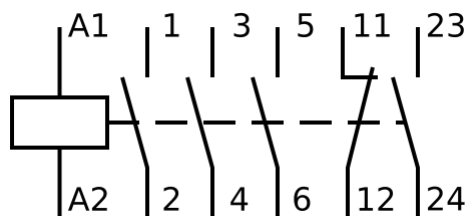

Electromechanical relay schematic showing a control coil, four pairs of normally open and one pair of normally closed contacts

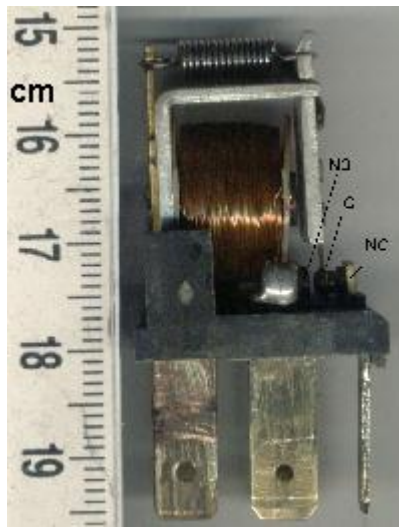

An automotive-style miniature relay with the dust cover taken off

Relays are used to control a [circuit](#) by an independent low-power signal and to control several circuits by one signal. They were first used in long-distance [telegraph](#) circuits as [signal repeaters](#) that transmit a refreshed copy of the incoming signal onto another circuit. Relays were used extensively in [telephone exchanges](#) and early [computers](#) to perform [logical operations](#).

The traditional [electromechanical](#) relay uses an [electromagnet](#) to close or open the contacts, but relays using other operating principles have also been invented, such as in [solid-state relays](#) which use [semiconductor](#) properties for control without relying on [moving parts](#). Relays with calibrated operating characteristics and sometimes multiple operating coils are used to protect [electrical circuits](#) from overload or faults; in modern electric power systems these functions are performed by digital instruments still called [protective relays](#) or [safety relays](#).

Latching relays require only a single pulse of control power to operate the switch persistently. Another pulse applied to a second set of control terminals, or a pulse with opposite polarity, resets the switch, while repeated pulses of the same kind have no effects. Magnetic latching relays are useful in applications when interrupted power should not affect the circuits that the relay is controlling.

History

In 1809 an electrolytic relay was designed as an alarm for an electrochemical telegraph by [Samuel Thomas von Sömmerring](#).^[1]


Electrical relays got their start mainly in application to [telegraphs](#). American scientist [Joseph Henry](#) is often cited to have invented a relay in 1835 in order to improve his version of the [electrical telegraph](#), developed earlier in 1831.^{[2][3][4][5]} However, Henry never published any of these experiments and dating for his relay experiments is based solely on the words of Henry himself and his students, often decades later.^{[6][7]}

In March 1837 [Edward Davy](#) deposited a letter with the British Secretary for the Society of Arts containing his ideas for an electromagnetic relay, which, even if it was not the first, was considered more practical than previous designs, being a 'make-and-break' type rather than being based on the use of mercury. He did this two months before [Charles Wheatstone](#) and [William Cooke](#) filed their first patent for their telegraph system and would file a patent for the same idea a year later.^{[8][9]}


However, an official patent was not issued until 1840 to [Samuel Morse](#) for his telegraph, which is now called a relay. The mechanism described acted as a digital amplifier, repeating the telegraph signal, and thus allowing signals to be propagated as far as desired.^[10]

The word *relay* appears in the context of electromagnetic operations from 1860 onwards.^[11]


Basic design and operation

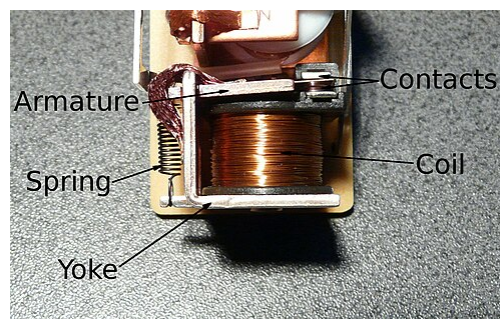

Simple electromechanical relay

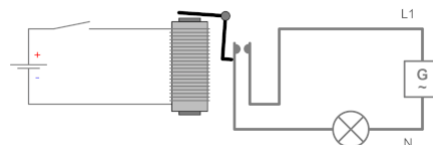

Operation without [flyback diode](#), arcing causes degradation of the switch contacts

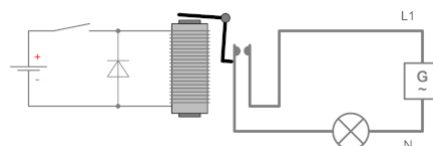


Operation with flyback diode, arcing in the control circuit is avoided

A simple [electromagnetic](#) relay consists of a coil of wire wrapped around a [soft iron core](#) (a solenoid), an iron yoke which provides a low [reluctance](#) path for magnetic flux, a movable iron [armature](#), and one or more sets of contacts (there are two contacts in the relay pictured). The armature is hinged to the yoke and mechanically linked to one or more sets of moving contacts. The armature is held in place by a [spring](#) so that when the relay is de-energized there is an air gap in the magnetic circuit. In this condition, one of the two sets of contacts in the relay pictured


is closed, and the other set is open. Other relays may have more or fewer sets of contacts depending on their function. The relay in the picture also has a wire connecting the armature to the yoke. This ensures continuity of the circuit between the moving contacts on the armature, and the circuit track on the [printed circuit board](#) (PCB) via the [yoke](#), which is soldered to the PCB.

When an [electric current](#) is passed through the coil it generates a [magnetic field](#) that activates the armature, and the consequent movement of the movable contact(s) either makes or breaks (depending upon construction) a connection with a fixed contact. If the set of contacts was closed when the relay was de-energized, then the movement opens the contacts and breaks the connection, and vice versa if the contacts were open. When the current to the coil is switched off, the armature is returned by a force, approximately half as strong as the magnetic force, to its relaxed position. Usually this force is provided by a spring, but gravity is also used commonly in industrial motor starters. Most relays are manufactured to operate quickly. In a low-voltage application this reduces noise; in a high voltage or current application it reduces [arcing](#).

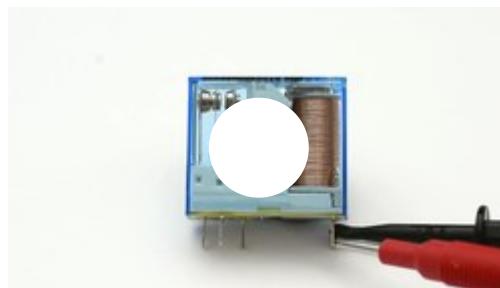

Operation of a 12 A relay

When the coil is energized with [direct current](#), a [flyback diode](#) or [snubber resistor](#) is often placed across the coil to dissipate the energy from the collapsing magnetic field ([back EMF](#)) at deactivation, which would otherwise generate a [voltage spike](#) dangerous to [semiconductor](#) circuit components. Such diodes were not widely used before the application of [transistors](#) as relay drivers, but soon became ubiquitous as early [germanium transistors](#) were easily destroyed by this surge. Some automotive relays include a diode inside the relay case. Resistors, while more durable than diodes, are less efficient at eliminating voltage spikes generated by relays^[12] and therefore not as commonly used.

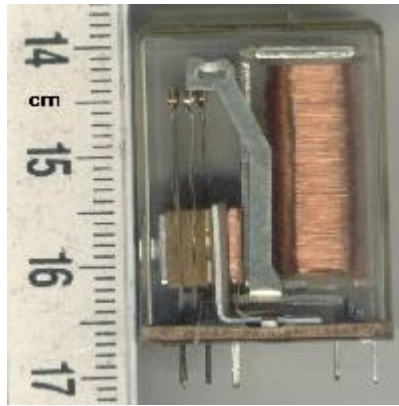


A small cradle relay often used in electronics. The "cradle" term refers to the shape of the relay's armature

If the relay is driving a large, or especially a [reactive](#) load, there may be a similar problem of surge currents around the relay output contacts. In this case a snubber circuit (a capacitor and resistor in series) across the contacts may absorb the surge. Suitably rated capacitors and the associated resistor are sold as a single packaged component for this commonplace use.

If the coil is designed to be energized with [alternating current](#) (AC), some method is used to split the flux into two out-of-phase components which add together, increasing the minimum pull on the armature during the AC cycle. Typically this is done with a small copper "shading ring" crimped around a portion of the core that creates the delayed, out-of-phase component,^[13] which holds the contacts during the zero crossings of the control voltage.^[14]

Contact materials for relays vary by application. Materials with low contact resistance may be oxidized by the air, or may tend to "stick" instead of cleanly parting when opening. Contact material may be optimized for low electrical resistance, high strength to withstand repeated operations, or high capacity to withstand the heat of an arc. Where very low resistance is required, or low thermally-induced voltages are desired, gold-plated contacts may be used, along with palladium and other non-oxidizing, semi-precious metals. Silver or silver-plated contacts are used for signal switching. Mercury-wetted relays make and break circuits using a thin, self-renewing film of liquid mercury. For higher-power relays switching many amperes, such as motor circuit contactors, contacts are made with a mixtures of silver and cadmium oxide, providing low contact resistance and high resistance to the heat of arcing. Contacts used in circuits carrying scores or hundreds of amperes may include additional structures for heat dissipation and management of the arc produced when interrupting the circuit.^[15] Some relays have field-replaceable contacts, such as certain machine tool relays; these may be replaced when worn out, or changed between normally open and normally closed state, to allow for changes in the controlled circuit.^[16]

Terminology

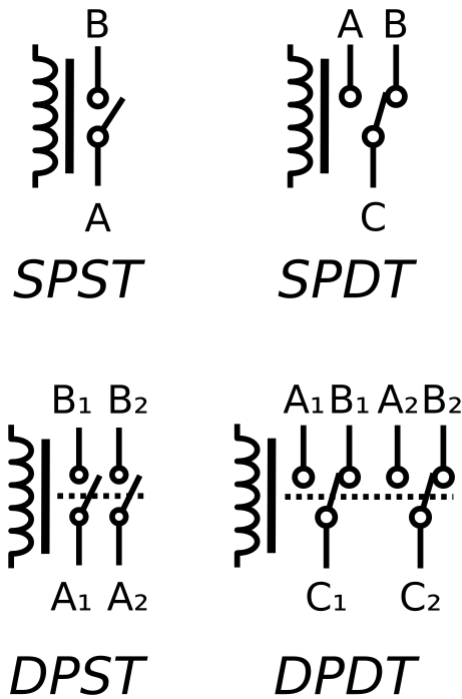

Circuit symbols of relays (C denotes the common terminal in SPDT and DPDT types.)

Since relays are [switches](#), the terminology applied to switches is also applied to relays; a relay switches one or more *poles*, each of whose [contacts](#) can be *thrown* by energizing the coil. Normally open (NO) contacts connect the circuit when the relay is activated; the circuit is disconnected when the relay is inactive. Normally closed (NC) contacts disconnect the circuit when the relay is activated; the circuit is connected when the relay is inactive. All of the contact forms involve combinations of NO and NC connections.

The National Association of Relay Manufacturers and its successor, the Relay and Switch Industry Association define 23 distinct [electrical contact forms](#) found in relays and switches.^[17] Of these, the following are commonly encountered:

- *SPST-NO* (Single-Pole Single-Throw, Normally-Open) relays have a single [Form A](#) or *make* contact. These have two terminals which can be connected or disconnected. Including two for the coil, such a relay has four terminals in total.
- *SPST-NC* (Single-Pole Single-Throw, Normally-Closed) relays have a single [Form B](#) or *break* contact. As with an SPST-NO relay, such a relay has four terminals in total.
- *SPDT* (Single-Pole Double-Throw) relays have a single set of [Form C](#), *break before make* or *transfer* contacts. That is, a common terminal connects to either of two others, never connecting to both at the same time. Including two for the coil, such a relay has a total of five terminals.

- *DPST* – Double-Pole Single-Throw relays are equivalent to a pair of SPST switches or relays actuated by a single coil. Including two for the coil, such a relay has a total of six terminals. The poles may be *Form A* or *Form B* (or one of each; the designations *NO* and *NC* should be used to resolve the ambiguity).
- *DPDT* – Double-Pole Double-Throw relays have two sets of *Form C* contacts. These are equivalent to two SPDT switches or relays actuated by a single coil. Such a relay has eight terminals, including the coil
- *Form D* – make before break^[18]
- *Form E* – combination of D and B^[18]

The *S* (*single*) or *D* (*double*) designator for the pole count may be replaced with a number, indicating multiple contacts connected to a single *actuator*. For example, 4PDT indicates a four-pole double-throw relay that has 12 switching terminals.

EN 50005 are among applicable standards for relay terminal numbering; a typical *EN 50005*-compliant SPDT relay's terminals would be numbered 11, 12, 14, A1 and A2 for the C, NC, NO, and coil connections, respectively.^[19]

DIN 72552 defines contact numbers in relays for automotive use:

- 85 = relay coil -
- 86 = relay coil +
- 87 = to load (normally open)
- 87a = to load (normally closed)
- 30 = battery +

Types

Coaxial relay

Where radio transmitters and receivers share one antenna, often a coaxial relay is used as a TR (transmit-receive) relay, which switches the antenna from the receiver to the transmitter. This protects the receiver from the high power of the transmitter. Such relays are often used in *transceivers* which combine transmitter and receiver in one unit. The relay contacts are designed not to reflect any radio frequency power back toward the source, and to provide very high isolation between receiver and transmitter terminals. The *characteristic impedance* of the relay is matched to the *transmission line* impedance of the system, for example, 50 ohms.^[20]

Contactor

A [contactor](#) is a heavy-duty relay with higher current ratings,^[21] used for switching [electric motors](#) and lighting loads. Continuous current ratings for common contactors range from 10 amps to several hundred amps. High-current contacts are made with alloys containing [silver](#). The unavoidable arcing causes the contacts to oxidize; however, [silver oxide](#) is still a good conductor.^[22] Contactors with overload protection devices are often used to start motors.^[23]

Force-guided contacts relay

A force-guided contacts relay has relay contacts that are mechanically linked together, so that when the relay coil is energized or de-energized, all of the linked contacts move together. If one set of contacts in the relay becomes immobilized, no other contact of the same relay will be able to move. The function of force-guided contacts is to enable the safety circuit to check the status of the relay. Force-guided contacts are also known as "positive-guided contacts", "captive contacts", "locked contacts", "mechanically linked contacts", or "safety relays".


These safety relays have to follow design rules and manufacturing rules that are defined in one main machinery standard EN 50205 : Relays with forcibly guided (mechanically linked) contacts. These rules for the safety design are the one defined in type B standards such as EN 13849-2 as Basic safety principles and Well-tried safety principles for machinery that applies to all machines.

Force-guided contacts by themselves can not guarantee that all contacts are in the same state, however, they do guarantee, subject to no gross mechanical fault, that no contacts are in opposite states. Otherwise, a relay with several normally open (NO) contacts may stick when energized, with some contacts closed and others still slightly open, due to mechanical tolerances. Similarly, a relay with several normally closed (NC) contacts may stick to the unenergized position, so that when energized, the circuit through one set of contacts is broken, with a marginal gap, while the other remains closed. By introducing both NO and NC contacts, or more commonly, changeover contacts, on the same relay, it then becomes possible to guarantee that if any NC contact is closed, all NO contacts are open, and conversely, if any NO contact is closed, all NC contacts are open. It is not possible to reliably ensure that any particular contact is closed, except by potentially intrusive and safety-degrading sensing of its circuit conditions, however in safety systems it is usually the NO state that is most important, and as explained above, this is reliably verifiable by detecting the closure of a contact of opposite sense.

Force-guided contact relays are made with different main contact sets, either NO, NC or changeover, and one or more auxiliary contact sets, often of reduced current or voltage rating, used for the monitoring system. Contacts may be all NO, all NC, changeover, or a mixture of

these, for the monitoring contacts, so that the safety system designer can select the correct configuration for the particular application. Safety relays are used as part of an engineered safety system.

Latching relay

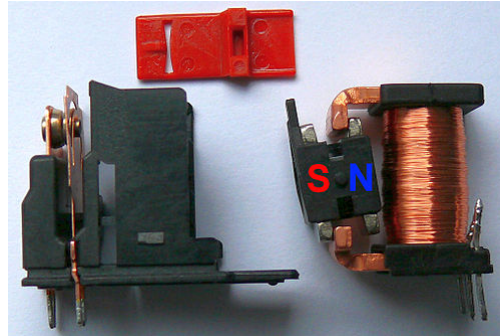

Latching relay with permanent magnet

A latching relay, also called *impulse*, *bistable*, *keep*, or *stay* relay, or simply *latch*, maintains either contact position indefinitely without power applied to the coil. The advantage is that one coil consumes power only for an instant while the relay is being switched, and the relay contacts retain this setting across a power outage. A latching relay allows remote control of building lighting without the hum that may be produced from a continuously (AC) energized coil.

In one mechanism, two opposing coils with an over-center spring or permanent magnet hold the contacts in position after the coil is de-energized. A pulse to one coil turns the relay on, and a pulse to the opposite coil turns the relay off. This type is widely used where control is from simple switches or single-ended outputs of a control system, and such relays are found in [avionics](#) and numerous industrial applications.

Another latching type has a [remanent](#) core that retains the contacts in the operated position by the remanent magnetism in the core. This type requires a current pulse of opposite polarity to release the contacts. A variation uses a permanent magnet that produces part of the force required to close the contact; the coil supplies sufficient force to move the contact open or closed by aiding or opposing the field of the permanent magnet.^[24] A polarity controlled relay needs changeover switches or an [H-bridge](#) drive circuit to control it. The relay may be less expensive than other types, but this is partly offset by the increased costs in the external circuit.

In another type, a *ratchet relay* has a ratchet mechanism that holds the contacts closed after the coil is momentarily energized. A second impulse, in the same or a separate coil, releases the contacts.^[24] This type may be found in certain cars, for [headlamp](#) dipping and other functions where alternating operation on each switch actuation is needed.

A [stepping relay](#) is a specialized kind of multi-way latching relay designed for early automatic

telephone exchanges.

An [earth-leakage circuit breaker](#) includes a specialized latching relay.

Very [early computers](#) often stored bits in a magnetically latching relay, such as [ferreed](#) or the later [remreed](#) in the [1ESS switch](#).

Some early computers used ordinary relays as a kind of [latch](#)—they store bits in ordinary wire-spring relays or reed relays by feeding an output wire back as an input, resulting in a feedback loop or [sequential circuit](#). Such an electrically latching relay requires continuous power to maintain state, unlike magnetically latching relays or mechanically ratcheting relays. While [\(self-\)holding circuits](#) are often realized with relays they can also be implemented by other means.

In computer memories, latching relays and other relays were replaced by [delay-line memory](#), which in turn was replaced by a series of ever faster and ever smaller memory technologies.

Machine tool relay

A machine tool relay is a type standardized for industrial control of [machine tools](#), transfer machines, and other sequential control. They are characterized by a large number of contacts (sometimes extendable in the field) which are easily converted from normally open to normally closed status, easily replaceable coils, and a [form factor](#) that allows compactly installing many relays in a control panel. Although such relays once were the backbone of automation in such industries as automobile assembly, the [programmable logic controller](#) (PLC) mostly displaced the machine tool relay from sequential control applications.

A relay allows circuits to be switched by electrical equipment: for example, a timer circuit with a relay could switch power at a preset time. For many years relays were the standard method of controlling industrial electronic systems. A number of relays could be used together to carry out complex functions ([relay logic](#)). The principle of relay logic is based on relays which energize and de-energize associated contacts. Relay logic is the predecessor of [ladder logic](#), which is commonly used in [programmable logic controllers](#).

Mercury relay

A [mercury relay](#) is a relay that uses mercury as the switching element. They are used where contact erosion would be a problem for conventional relay contacts. Owing to environmental considerations about significant amount of mercury used and modern alternatives, they are now comparatively uncommon.

Mercury-wetted relay



A mercury-wetted reed relay

A mercury-wetted reed relay is a form of reed relay that employs a [mercury switch](#), in which the contacts are wetted with [mercury](#). Mercury reduces the contact resistance and mitigates the associated voltage drop. Surface contamination may result in poor conductivity for low-current signals. For high-speed applications, the mercury eliminates contact bounce, and provides virtually instantaneous circuit closure. Mercury wetted relays are position-sensitive and must be mounted according to the manufacturer's specifications. Because of the toxicity and expense of liquid mercury, these relays have increasingly fallen into disuse.

The high speed of switching action of the mercury-wetted relay is a notable advantage. The mercury globules on each contact [coalesce](#), and the current rise time through the contacts is generally considered to be a few picoseconds. However, in a practical circuit it may be limited by the [inductance](#) of the contacts and wiring. It was quite common, before restrictions on the use of mercury, to use a mercury-wetted relay in the laboratory as a convenient means of generating fast rise time pulses, however although the rise time may be picoseconds, the exact timing of the event is, like all other types of relay, subject to considerable jitter, possibly milliseconds, due to mechanical variations.

The same coalescence process causes another effect, which is a nuisance in some applications. The contact resistance is not stable immediately after contact closure, and drifts, mostly downwards, for several seconds after closure, the change perhaps being 0.5 ohm.

Multi-voltage relays

Multi-voltage relays are devices designed to work for wide voltage ranges such as 24 to 240 VAC and VDC and wide frequency ranges such as 0 to 300 Hz. They are indicated for use in installations that do not have stable supply voltages.

Overload protection relay

Electric motors need [overcurrent](#) protection to prevent damage from over-loading the motor, or to protect against short circuits in connecting cables or internal faults in the motor windings.^[25]

The overload sensing devices are a form of heat operated relay where a coil heats a [bimetallic strip](#), or where a solder pot melts, to operate auxiliary contacts. These auxiliary contacts are in series with the motor's contactor coil, so they turn off the motor when it overheats.^[26]

This thermal protection operates relatively slowly allowing the motor to draw higher starting currents before the protection relay will trip. Where the overload relay is exposed to the same ambient temperature as the motor, a useful though crude compensation for motor ambient temperature is provided.^[27]


The other common overload protection system uses an electromagnet coil in series with the motor circuit that directly operates contacts. This is similar to a control relay but requires a rather high fault current to operate the contacts. To prevent short over current spikes from causing nuisance triggering the armature movement is damped with a [dashpot](#). The thermal and magnetic overload detections are typically used together in a motor protection relay.

Electronic overload protection relays measure motor current and can estimate motor winding temperature using a "thermal model" of the motor armature system that can be set to provide more accurate motor protection. Some motor protection relays include temperature detector inputs for direct measurement from a [thermocouple](#) or [resistance thermometer](#) sensor embedded in the winding.^[28]

Polarized relay

A polarized relay places the armature between the poles of a permanent magnet to increase sensitivity. Polarized relays were used in middle 20th Century [telephone exchanges](#) to detect faint pulses and correct [telegraphic distortion](#).

Reed relay

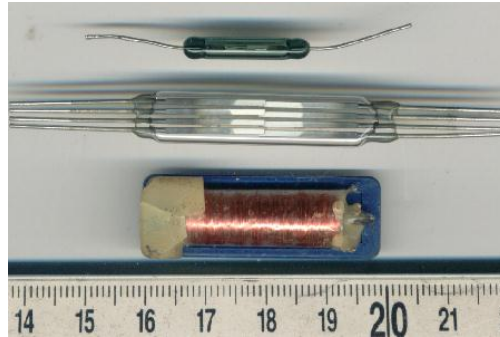

(from top) Single-pole reed switch, four-pole reed switch and single-pole reed relay.
Scale in centimeters

A [reed relay](#) is a [reed switch](#) enclosed in a solenoid. The switch has a set of contacts inside an [evacuated](#) or [inert gas](#)-filled glass tube that protects the contacts against atmospheric [corrosion](#); the contacts are made of [magnetic](#) material that makes them move under the influence of the field of the enclosing solenoid or an external magnet.

Reed relays can switch faster than larger relays and require very little power from the control circuit. However, they have relatively low switching current and voltage ratings. Though rare, the reeds can become magnetized over time, which makes them stick "on", even when no current is present; changing the orientation of the reeds or [degaussing](#) the switch with respect to the solenoid's magnetic field can resolve this problem.

Sealed contacts with mercury-wetted contacts have longer operating lives and less contact chatter than any other kind of relay.^[29]


Safety relays

[Safety relays](#) are devices which generally implement protection functions. In the event of a hazard, the task of such a safety function is to use appropriate measures to reduce the existing risk to an acceptable level.^[30]


Solid-state contactor

A solid-state contactor is a heavy-duty solid state relay, including the necessary heat sink, used where frequent on-off cycles are required, such as with electric heaters, small [electric motors](#), and lighting loads. There are no moving parts to wear out and there is no contact bounce due to vibration. They are activated by AC control signals or DC control signals from [programmable logic controllers](#) (PLCs), PCs, [transistor-transistor logic](#) (TTL) sources, or other microprocessor and microcontroller controls.

Solid-state relay

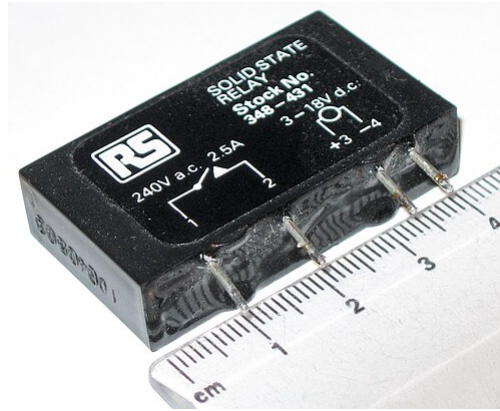

Solid-state relays have no moving parts.

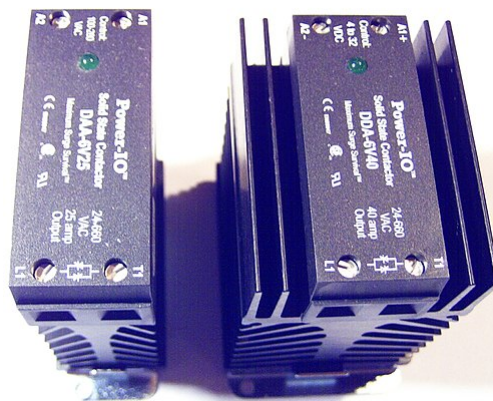

25 A and 40 A solid state contactors

A [solid-state relay](#) (SSR) is a [solid state](#) electronic component that provides a function similar to an [electromechanical](#) relay but does not have any moving components, increasing long-term reliability. A solid-state relay uses a [thyristor](#), [TRIAC](#) or other solid-state switching device, activated by the control signal, to switch the controlled load, instead of a solenoid. An [optocoupler](#) (a [light-emitting diode](#) (LED) coupled with a [photo transistor](#)) can be used to isolate control and controlled circuits.^[31]

Static relay

A [static relay](#) consists of electronic circuitry to emulate all those characteristics which are achieved by moving parts in an electro-magnetic relay.

Time-delay relay

Timing relays are arranged for an intentional delay in operating their contacts. A very short (a fraction of a second) delay would use a copper disk between the armature and moving blade assembly. Current flowing in the disk maintains a magnetic field for a short time, lengthening release time. For a slightly longer (up to a minute) delay, a dashpot is used. A dashpot is a piston

filled with fluid that is allowed to escape slowly; both air-filled and oil-filled dashpots are used. The time period can be varied by increasing or decreasing the flow rate. For longer time periods, a mechanical clockwork timer is installed. Relays may be arranged for a fixed timing period, or may be field-adjustable, or remotely set from a control panel. Modern microprocessor-based timing relays provide precision timing over a great range.

Some relays are constructed with a kind of "shock absorber" mechanism attached to the armature, which prevents immediate, full motion when the coil is either energized or de-energized. This addition gives the relay the property of time-delay actuation. Time-delay relays can be constructed to delay armature motion on coil energization, de-energization, or both.

Time-delay relay contacts must be specified not only as either normally open or normally closed, but whether the delay operates in the direction of closing or in the direction of opening. The following is a description of the four basic types of time-delay relay contacts.

First, we have the normally open, timed-closed (NOTC) contact. This type of contact is normally open when the coil is unpowered (de-energized). The contact is closed by the application of power to the relay coil, but only after the coil has been continuously powered for the specified amount of time. In other words, the direction of the contact's motion (either to close or to open) is identical to a regular NO contact, but there is a delay in closing direction. Because the delay occurs in the direction of coil energization, this type of contact is alternatively known as a normally open, on-delay.

Vacuum relays

A vacuum relay is a sensitive relay having its contacts mounted in an evacuated glass housing, to permit handling radio-frequency voltages as high as 20,000 volts without flashover between contacts even though contact spacing is as low as a few hundredths of an inch when open.

Applications



A DPDT AC coil relay with "ice cube" packaging

Relays are used wherever it is necessary to control a high power or high voltage circuit with a low power circuit, especially when [galvanic isolation](#) is desirable. The first application of relays was in long [telegraph](#) lines, whereas the weak signal received at an intermediate station could control a contact, regenerating the signal for further transmission. High-voltage or high-current devices can be controlled with small, low voltage wiring and pilots switches. Operators can be isolated from the high voltage circuit. Low power devices such as [microprocessors](#) can drive relays to control electrical loads beyond their direct drive capability. In an automobile, a starter relay allows the high current of the cranking motor to be controlled with small wiring and contacts in the ignition key.

Electromechanical switching systems including [Strowger](#) and [crossbar](#) telephone exchanges made extensive use of relays in ancillary control circuits. The Relay Automatic Telephone Company also manufactured telephone exchanges based solely on relay switching techniques designed by [Gotthilf Ansgarius Betulander](#). The first public relay based telephone exchange in the [UK](#) was installed in [Fleetwood](#) on 15 July 1922 and remained in service until 1959. ^{[32][33]}

The use of relays for the logical control of complex switching systems like telephone exchanges was studied by [Claude Shannon](#), who formalized the application of [Boolean algebra](#) to relay circuit design in *[A Symbolic Analysis of Relay and Switching Circuits](#)*. Relays can perform the basic operations of Boolean combinatorial logic. For example, the Boolean AND function is realised by connecting normally open relay contacts in series, the OR function by connecting normally open contacts in parallel. Inversion of a logical input can be done with a normally closed contact. Relays were used for control of automated systems for machine tools and production lines. The [Ladder programming language](#) is often used for designing [relay logic](#) networks.

Early [electro-mechanical computers](#) such as the [ARRA](#), [Harvard Mark II](#), [Zuse Z2](#), and [Zuse Z3](#) used relays for logic and working registers. However, electronic devices proved faster and easier


to use.

Relays are much more resistant than semiconductors to nuclear radiation, so they are widely used in safety-critical logic, such as the control panels of radioactive waste-handling machinery. Electromechanical [protective relays](#) are used to detect overload and other faults on electrical lines by opening and closing [circuit breakers](#).

Protective relays

For protection of electrical apparatus and transmission lines, electromechanical relays with accurate operating characteristics were used to detect overload, short-circuits, and other faults. While many such relays remain in use, [digital protective relays](#) now provide equivalent and more complex protective functions.

Railway signaling

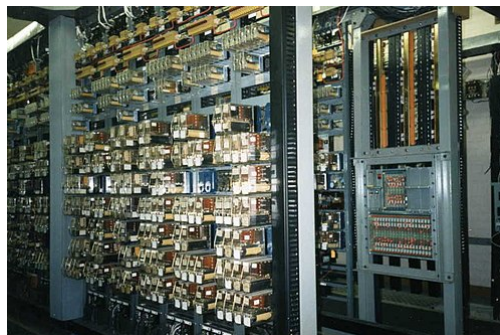

Part of a relay [interlocking](#) using UK Q-style miniature plug-in relays

[Railway signalling](#) relays are large considering the mostly small voltages (less than 120 V) and currents (perhaps 100 mA) that they switch. Contacts are widely spaced to prevent flashovers and short circuits over a lifetime that may exceed fifty years.

Since rail signal circuits must be highly reliable, special techniques are used to detect and prevent failures in the relay system. To protect against false feeds, [double switching](#) relay contacts are often used on both the positive and negative side of a circuit, so that two false feeds are needed to cause a false signal. Not all relay circuits can be proved so there is reliance on construction features such as carbon to silver contacts to resist lightning induced contact welding and to provide AC immunity.

[Opto-isolators](#) are also used in some instances with railway signalling, especially where only a single contact is to be switched.

Selection considerations



Several 30-contact relays in "Connector" circuits in mid-20th century 1XB switch and 5XB switch telephone exchanges; cover removed on one.

Selection of an appropriate relay for a particular application requires evaluation of many different factors:

- Number and type of contacts — normally open, normally closed, (double-throw)
- Contact sequence — "make before break" or "break before make". For example, the old style telephone exchanges required make-before-break so that the connection did not get dropped while dialing the number.
- Contact current rating — small relays switch a few amperes, large contactors are rated for up to 3000 amperes, alternating or direct current
- Contact voltage rating — typical control relays rated 300 VAC or 600 VAC, automotive types to 50 VDC, special high-voltage relays to about 15,000 V
- Operating lifetime, useful life — the number of times the relay can be expected to operate reliably. There is both a mechanical life and a contact life. The contact life is affected by the type of load switched. Breaking load current causes [undesired arcing](#) between the contacts, eventually leading to contacts that weld shut or contacts that fail due to erosion by the arc.^[34]
- Coil voltage — machine-tool relays usually 24 VDC, 120 or 250 VAC, relays for switchgear may have 125 V or 250 VDC coils,
- Coil current — Minimum current required for reliable operation and minimum holding current, as well as effects of power dissipation on coil temperature at various [duty cycles](#). "Sensitive" relays operate on a few milliamperes.
- Package/enclosure — open, touch-safe, double-voltage for isolation between circuits, [explosion proof](#), outdoor, oil and splash resistant, washable for [printed circuit board](#) assembly

- Operating environment — minimum and maximum operating temperature and other environmental considerations, such as effects of humidity and salt
- Assembly — Some relays feature a sticker that keeps the enclosure sealed to allow PCB post soldering cleaning, which is removed once assembly is complete.
- Mounting — sockets, plug board, rail mount, panel mount, through-panel mount, enclosure for mounting on walls or equipment
- Switching time — where high speed is required
- "Dry" contacts — when switching very low level signals, special contact materials may be needed such as gold-plated contacts
- Contact protection — suppress arcing in very inductive circuits
- Coil protection — suppress the surge voltage produced when switching the coil current
- Isolation between coil contacts
- Aerospace or radiation-resistant testing, special quality assurance
- Expected mechanical loads due to [acceleration](#) — some relays used in [aerospace](#) applications are designed to function in [shock](#) loads of 50 *g*, or more.
- Size — smaller relays often resist mechanical vibration and shock better than larger relays, because of the lower inertia of the moving parts and the higher natural frequencies of smaller parts.^[29] Larger relays often handle higher voltage and current than smaller relays.
- Accessories such as timers, auxiliary contacts, pilot lamps, and test buttons.
- Regulatory approvals.
- Stray magnetic linkage between coils of adjacent relays on a printed circuit board.

There are many considerations involved in the correct selection of a control relay for a particular application, including factors such as speed of operation, sensitivity, and [hysteresis](#). Although typical control relays operate in the 5 [ms](#) to 20 ms range, relays with switching speeds as fast as 100 [μs](#) are available. [Reed relays](#) which are actuated by low currents and switch fast are suitable for controlling small currents.

As with any switch, the contact current (unrelated to the coil current) must not exceed a given value to avoid damage. In high-[inductance](#) circuits such as [motors](#), other issues must be addressed. When an inductance is connected to a power source, an [input surge current or electromotor starting current](#) larger than the steady-state current exists. When the circuit is broken, the current cannot change instantaneously, which creates a potentially damaging arc across the separating contacts.

Consequently, for relays used to control inductive loads, we must specify the maximum current that may flow through the relay contacts when it actuates, the *make rating*; the continuous rating; and the *break rating*. The make rating may be several times larger than the continuous rating, which is larger than the break rating.

Safety and reliability

Switching while "wet" (under load) causes undesired arcing between the contacts, eventually leading to contacts that weld shut or contacts that fail due to a buildup of surface damage caused by the destructive arc energy.^[34]

Inside the [Number One Electronic Switching System](#) (1ESS) [crossbar switch](#) and certain other high-reliability designs, the reed switches are always switched "dry" (without load) to avoid that problem, leading to much longer contact life.^[35]

Without adequate [contact protection](#), the occurrence of [electric current arcing](#) causes significant degradation of the contacts, which suffer significant and visible damage. Every time the relay contacts open or close under load, an electrical arc can occur between the contacts of the relay, either a *break* arc (when opening), or a *make* / [bounce](#) arc (when closing). In many situations, the *break* arc is more energetic and thus more destructive, in particular with inductive loads, but this can be mitigated by bridging the contacts with a [snubber](#) circuit. The inrush current of tungsten filament incandescent lamps is typically ten times the normal operating current. Thus, relays intended for tungsten loads may use special contact composition, or the relay may have lower contact ratings for tungsten loads than for purely resistive loads.

An electrical arc across relay contacts can be very hot — thousands of degrees Fahrenheit — causing the metal on the contact surfaces to melt, pool, and migrate with the current. The extremely high temperature of the arc splits the surrounding gas molecules, creating [ozone](#), [carbon monoxide](#), and other compounds. Over time, the arc energy slowly destroys the contact metal, causing some material to escape into the air as fine particulate matter. This action causes the material in the contacts to degrade and coagulation, resulting in device failure. This contact degradation drastically limits the overall life of a relay to a range of about 10,000 to 100,000 operations, a level far below the mechanical life of the device, which can be in excess of 20 million operations.^[36]

See also

- [Analogue switch](#)
- [Buchholz relay](#)
- [Dry contact](#)

- Flyback diode
- Nanoelectromechanical relay
- Race condition
- Stepping switch
- Wire spring relay

References

1. "The Electromagnetic Telegraph" (<http://web.archive.org/web/20210126030133/https://mysite.du.edu/~jcalvert/tel/morse/morse.htm#H1>) . Archived from the original (<https://mysite.du.edu/~jcalvert/tel/morse/morse.htm#H1>) on 26 January 2021.
2. *Icons of Invention: The Makers of the Modern World from Gutenberg to Gates* (<https://books.google.com/books?id=WKuG-VIwID8C&q=Invention+of+the+relay&pg=PA153>) . ABC-CLIO. 2009. p. 153. ISBN 9780313347436.
3. "The electromechanical relay of Joseph Henry" (<https://web.archive.org/web/20120618121911/http://history-computer.com/ModernComputer/Basis/relay.html>) . Georgi Dalakov. Archived from the original (<http://history-computer.com/ModernComputer/Basis/relay.html>) on 2012-06-18. Retrieved 2012-06-21.
4. *Scientific American Inventions and Discoveries: All the Milestones in Ingenuity--From the Discovery of Fire to the Invention of the Microwave Oven* (<https://books.google.com/books?id=pDbQVE3IdTcC&q=relay+Joseph+Henry+1835&pg=PA311>) . John Wiley & Sons. 2005-01-28. p. 311. ISBN 9780471660248.
5. Thomas Coulson (1950). *Joseph Henry: His Life and Work* (<https://archive.org/details/josephhenryhisli0000coul>) . Princeton: Princeton University Press.
6. Cooper, Andy (5 May 2016). *Practical Electronics: A Complete Introduction: Teach Yourself* (<https://books.google.com/books?id=2FXkBgAAQBAJ&q=joseph+henry+relay+1835&pg=SA4-PA6>) . John Murray Press. ISBN 978-1-4736-1408-6.
7. Osborne, H.S.; Dowling, A.M. (July 1932). "The Electrical Discoveries of Joseph Henry" (<http://www.worldradiohistory.com/Archive-Bell-System-Technical-Journal/30s/Bell-1932c.o.pdf>) (PDF). *Bell System Technical Journal*. **11** (Supplement): 1–22. doi:10.1002/j.1538-7305.1932.tb00627.x (<https://doi.org/10.1002%2Fj.1538-7305.1932.tb00627.x>) .
8. Fahie, John Joseph (1884). "A History of Electric Telegraphy, to the Year 1837" (<https://books.google.com/books?id=0Mo3AAAAMAAJ&q=Renewer>) .
9. McDonald, Donald; Hunt, Leslie B. (January 1982). *A History of Platinum and its Allied Metals*. Johnson Matthey Plc. p. 306. ISBN 0905118839.

10. US 1647 (<http://www.google.com/patents?id=Xx5AAAAAEBAJ&printsec=abstract&zoom=4&dq=1647>) , Morse, Samuel E.B., "Improvement in the Mode of Communicating Information by Signals by the Application of Electromagnetism", published June 20, 1840 *Patent US1647 - IMPROVEMENT IN THE MODE OF COMMUNICATING INFORMATION BY SIGNALS BY THE - Google Patents* (<https://web.archive.org/web/20120524081816/http://www.google.com/patents?id=Xx5AAAAAEBAJ&printsec=abstract&zoom=4&dq=1647>) . Archived from the original on May 24, 2012. Retrieved September 6, 2011.
11. "Relay" (http://www.etymonline.com/index.php?allowed_in_frame=0&search=relay&searchmode=none) . *EtymOnline.com*.
12. "Understanding Relays & Wiring Diagrams" (https://www.swe-check.com.au/editorials/understanding_relays.php) . *Swe-Check*. Retrieved 16 December 2020.
13. Mason, C. R. "Art & Science of Protective Relaying, Chapter 2, GE Consumer & Electrical" (<http://www.gedigitalenergy.com/multilin/notes/artsci/>) . Retrieved October 9, 2011.
14. Riba, J.R.; Espinosa, A.G.; Cusidó, J.; Ortega, J.A.; Romeral, L. (November 2008). *Design of Shading Coils for Minimizing the Contact Bouncing of AC Contactors* (<https://www.researchgate.net/publication/224355001>) . *Electrical Contacts*. p. 130. Retrieved 2018-01-07.
15. Ian Sinclair, *Passive Components for Circuit Design*, Elsevier, 2000 ISBN 008051359X, pp. 161–164
16. Fleckenstein, Joseph E. (2017). *Three-Phase Electrical Power*. CRC Press. p. 321. ISBN 978-1498737784.
17. Section 1.6, Engineers' Relay Handbook, 5th ed, Relay and Switch Industry Association, Arlington, VA; 3rd ed, National Association of Relay Manufacturers, Elkhart Ind., 1980; 2nd Ed. Hayden, New York, 1966; large parts of the 5th edition are on line [here](http://www.esterline.com/powersystems/DesignReference/RelayHandbook.aspx) (<http://www.esterline.com/powersystems/DesignReference/RelayHandbook.aspx>) Archived (<https://web.archive.org/web/20170705143411/http://www.esterline.com/powersystems/DesignReference/RelayHandbook.aspx>) 2017-07-05 at the [Wayback Machine](http://www.waybackmachine.org).
18. Alexandrovich, George. "The Audio Engineer's Handbook" (<https://www.americanradiohistory.com/Archive-DB-Magazine/60s/DB-1968-09.pdf>) (PDF). *Db: The Sound Engineering Magazine*. September 1968: 10.
19. EN 50005:1976 "Specification for low voltage switchgear and controlgear for industrial use. Terminal marking and distinctive number. General rules." (1976). In the UK published by BSI as BS 5472:1977.
20. Ian Sinclair, *Passive Components for Circuit Design*, Newnes, 2000 ISBN 008051359X, page 170

21. Croft, Terrell; Summers, Wilford, eds. (1987). *American Electricians' Handbook* (Eleventh ed.). New York: McGraw Hill. p. 7-124. ISBN 978-0-07-013932-9.
22. Rexford, Kenneth B.; Giuliani, Peter R. (2002). *Electrical control for machines* (<https://books.google.com/books?id=5RkbwbYq1joC&pg=PA58>) (6th ed.). Cengage Learning. p. 58. ISBN 978-0-7668-6198-5.
23. "Contactor or Motor Starter – What is the Difference?" (<http://eecoonline.com/contactor-or-motor-starter/>) . *EECOOnline.com*. 2015-01-13. Retrieved 2018-04-19.
24. Sinclair, Ian R. (2001), *Sensors and Transducers* (3rd ed.), Elsevier, p. 262, ISBN 978-0-7506-4932-2
25. Zocholl, Stan (2003). *AC Motor Protection*. Schweitzer Engineering Laboratories. ISBN 978-0972502610.
26. Edvard (2013-03-09). "Working Principle of Thermal Motor Protection Relay" (<http://electrical-engineering-portal.com/working-principle-of-thermal-motor-protection-relay>) . *Electrical-Engineering-Portal.com*. Electrical Engineering Portal. Retrieved 2017-12-30.
27. "Coordinated Power Systems Protection". *Department of the Army Technical Manual* (811–814). [United States Department of the Army](#): 3–1. 1991.
28. "Overload relay - Principle of operation, types, connection" (<https://www.electricalclassroom.com/overload-relay-principle-of-operation-types-connection/>) . *www.electricalclassroom.com*. 2020-02-15. Retrieved 2022-06-13.
29. Keller, A.C. (January 1964). "Recent Developments in Bell System Relays – Particularly Sealed Contact and Miniature Relays" (<https://archive.org/details/bstj43-1-15>) . *The Bell System Technical Journal*. **43** (1): 15–44. doi:10.1002/j.1538-7305.1964.tb04057.x (<https://doi.org/10.1002%2Fj.1538-7305.1964.tb04057.x>) . Retrieved 2023-03-16.
30. "Safety Compendium, Chapter 4 Safe control technology" (http://www.pilz.com/imperia/md/content/editors_mm/safety_compendium_en_2014_01.pdf) (PDF). p. 115.
31. "Optocoupler Tutorial" (<https://www.electronics-tutorials.ws/blog/optocoupler.html>) . 16 September 2013.
32. "Relay Automatic Telephone Company" (http://www.gracesguide.co.uk/Relay_Automatic_Telephone_Co) . Retrieved October 6, 2014.
33. "British Telecom History 1912-1968" (<https://web.archive.org/web/20141014015809/http://www.btplc.com/thegroup/btshistory/1912to1968/1922.htm>) . Archived from the original (<http://www.btplc.com/thegroup/btshistory/1912to1968/1922.htm>) on October 14, 2014. Retrieved October 8, 2014.

34. "Arc Suppression to Protect Relays From Destructive Arc Energy" (<http://www.electronic-components.com.au/products-services/arc-suppression/>) . Retrieved December 6, 2013.
35. Varney, Al L. (1991). "Questions About The No. 1 ESS Switch" (<http://yarchive.net/phone/1ess.html>) .
36. "Lab Note #105: Contact Life — Unsuppressed vs. Suppressed Arcing" (https://arcsuppressiontechnologies.com/wp-content/uploads/2016/07/Arc_Suppression_Lab_Note_105_Contact_Life.pdf) (PDF). Arc Suppression Technologies. 2013. Retrieved January 21, 2025.

External links

-  Media related to [Relay](#) at Wikimedia Commons